

de Raumbediengerät ecoUnit210...216
für Raumautomationsstation
fr Boîtier d'ambiance ecoUnit210...216
pour unité d'automatisation de locaux
en Room operating unit ecoUnit210...216
for room automation station
it Unità di servizio ambiente ecoUnit210...216
per regolatori ambiente
es Unidad ambiente ecoUnit210...216
para estación de automatización local
sv Rumsenhet för ecoUnit210...216
till rumsautomationsstationer
nl Ruimtebedieneneheid ecoUnit210...216
voor lokale automatisering

de Montagevorschrift
fr Instruction de montage
en Fitting instructions
it Istruzioni di montaggio
es Instrucciones de montaje
sv Monteringanvisning
nl Montagevoorschrift


EY-RU210
EY-RU211
EY-RU214
EY-RU216

de Installationsanweisung für die Elektrofachkraft
fr Notice d'installation pour l'électricien
en Guidelines for the electrician
it Informazioni per l'installatore elettrico
es Instrucciones de instalación para el electricista
sv Installationsinstruktion för behörig elektriker
nl Instalatie aanwijzing voor de elektromonteur

de Für den Einsatz in üblicher Umgebung
fr Pour usage dans un environnement normal
en For use in normal environments
it Per impiego in ambiente usuale
es Para el uso en ambiente normal
sv För användning i normal miljö
nl Voor toepassing in normale omgeving




EY-RU210




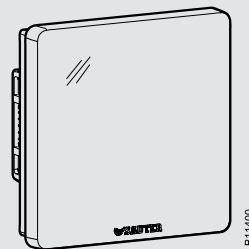








B11400

EY-RU211
EY-RU214
EY-RU216

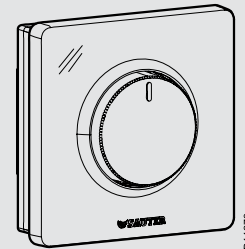

B11276

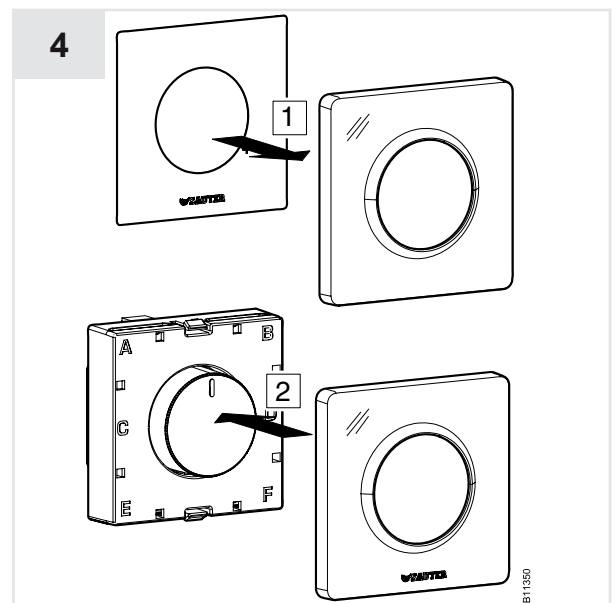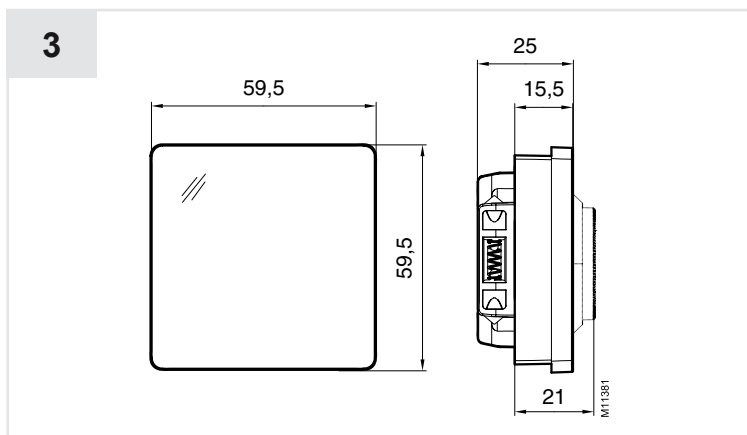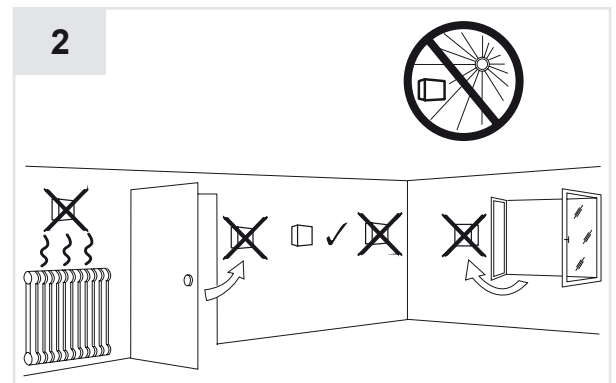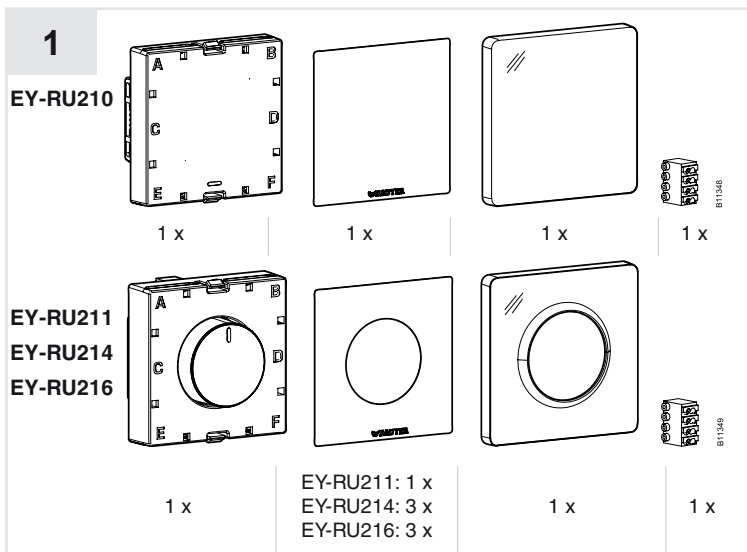

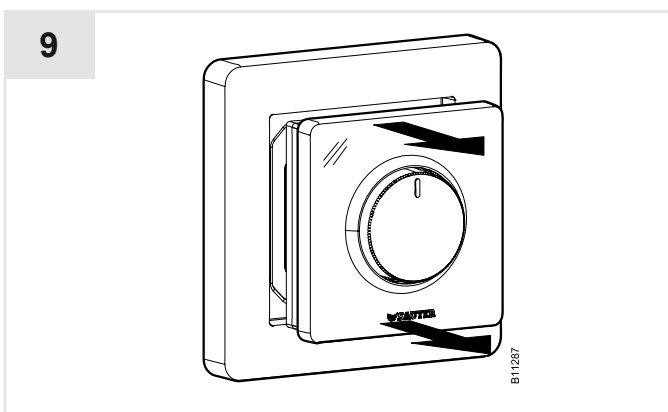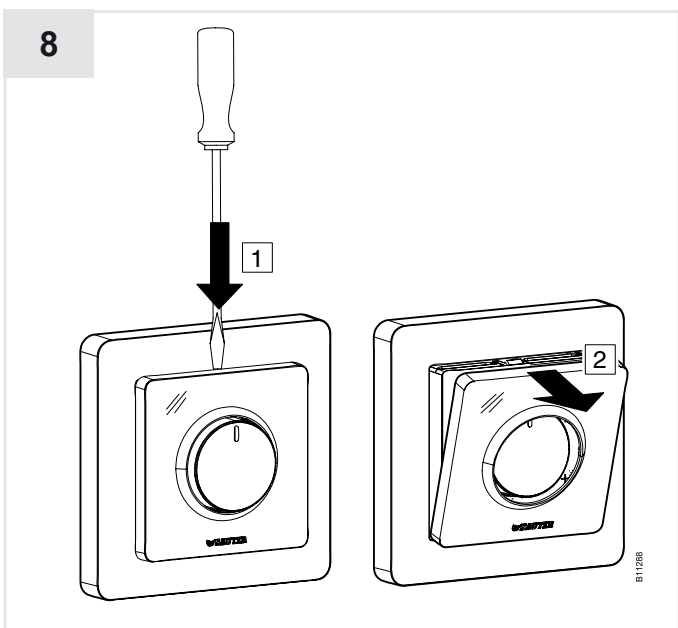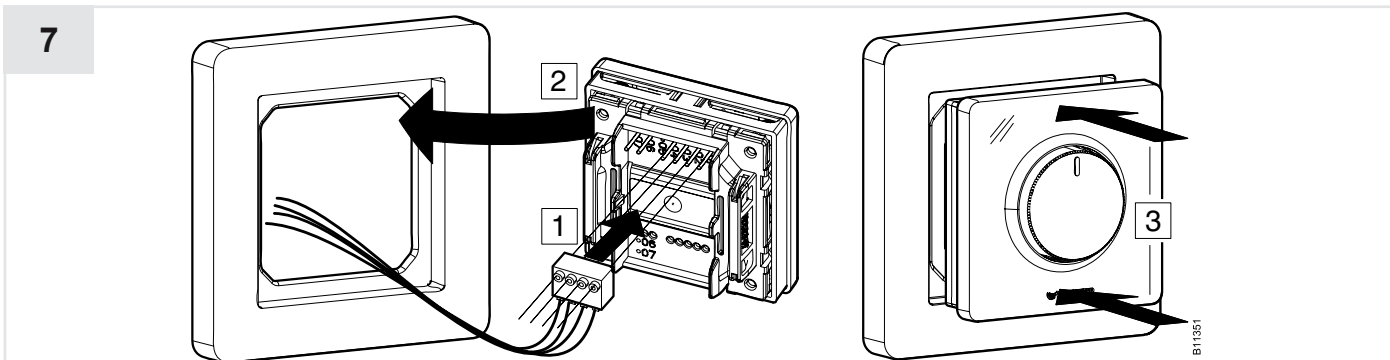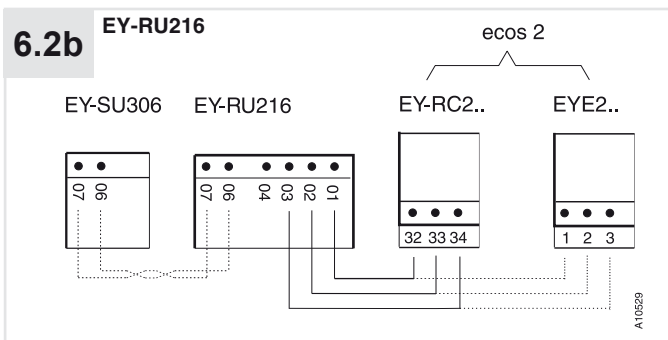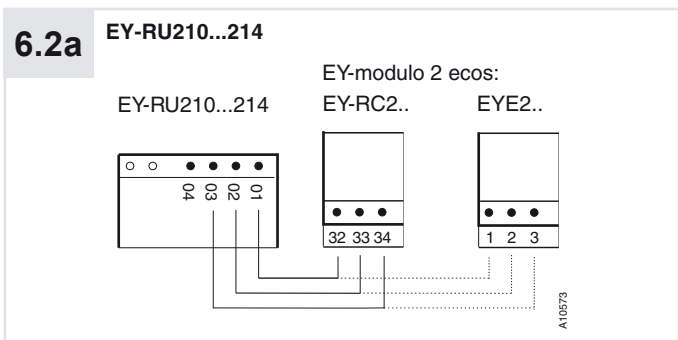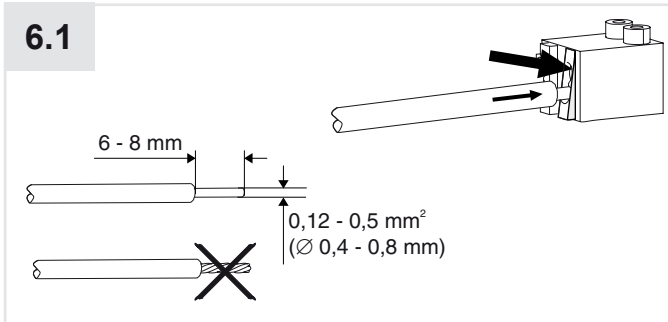


 de www.sauter-controls.com ➔ Produkte ➔ MD Datenblatt.
 fr www.sauter-controls.com ➔ Produits ➔ Fiche MD.
 en www.sauter-controls.com ➔ Products ➔ MD Datasheet.
 it www.sauter-controls.com ➔ Products ➔ MD Datasheet.
 es www.sauter-controls.com ➔ Products ➔ MD Datasheet.
 sv www.sauter-controls.com ➔ Products ➔ MD Datasheet.
 nl www.sauter-controls.com ➔ Products ➔ MD Datasheet.

de Dokument aufbewahren
 fr Ce document est à conserver
 en Retain this document
 it Conservare il documento
 es Guardar el documento
 sv Spara dokumentationen
 nl Document bewaren

© SAUTER HeadOffice
 Fr. Sauter AG
 Im Surinam 55
 CH-4016 Basel
 Tel. +41 61 - 695 55 55
 Fax +41 61 - 695 55 10
www.sauter-controls.com
info@sauter-controls.com

Printed in Switzerland