








Ausstemperatur-Messumformer  
Transmetteur de température extérieure  
Outdoor Temperature Transmitter  
Trasmettitore di temperatura esterna  
Transmisor de temperatura exterior  
Yttertemperatur-Mätomformare  
Buitentemperatuur-Meetopnemer


**MV 23212**

Montageanleitung  
Instruction de montage  
Installation instructions  
Istruzioni di montaggio  
Instrucciones de montaje  
Monteringsanvisning  
Montagevoorschrift

**TWUP  
210,220**

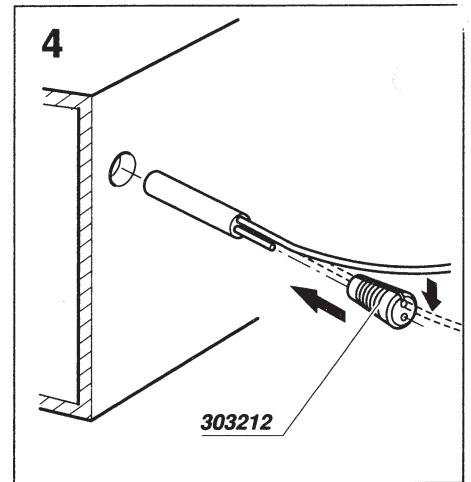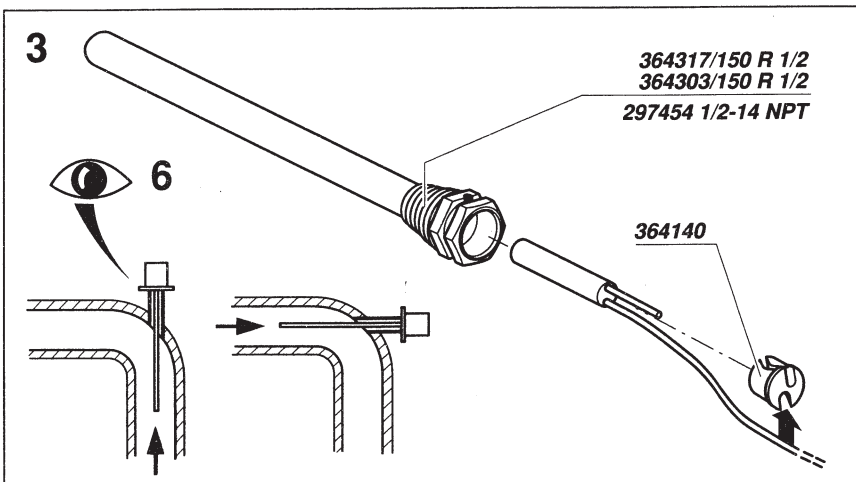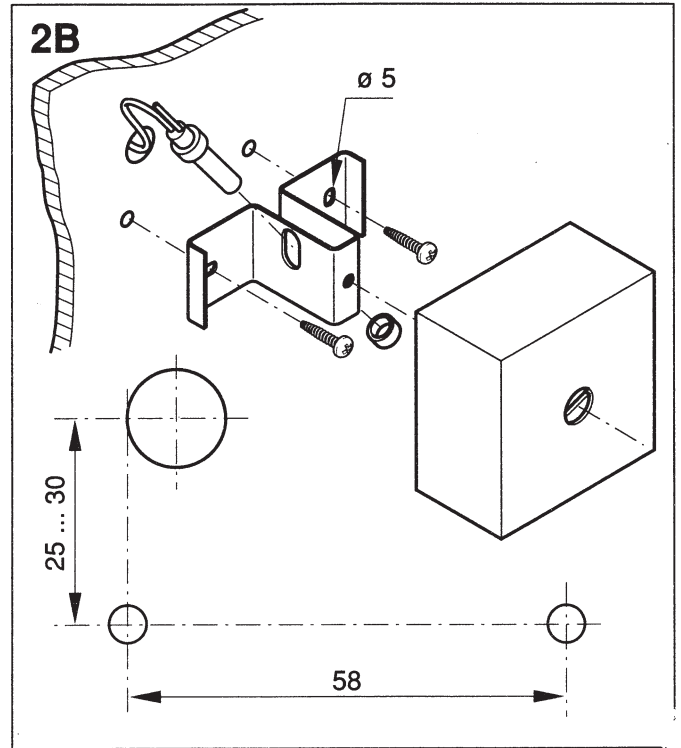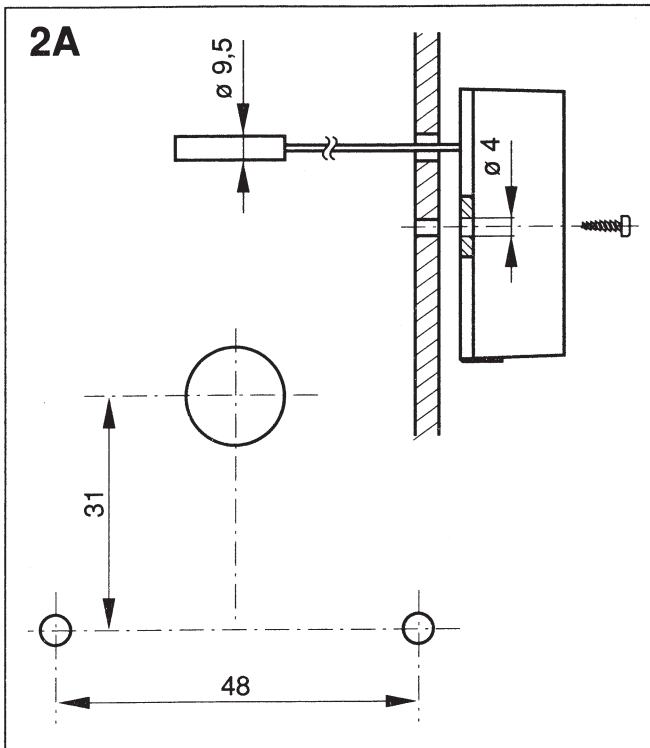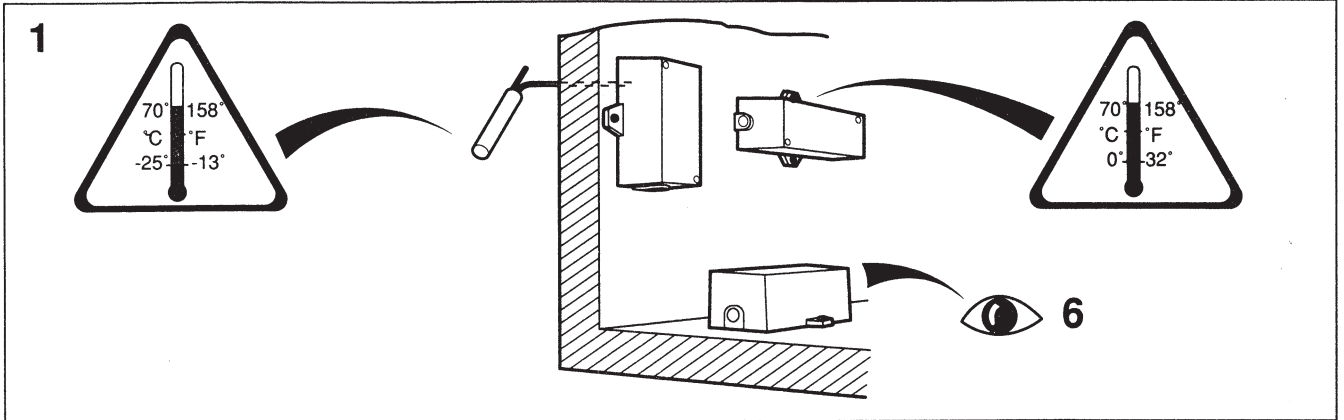


5

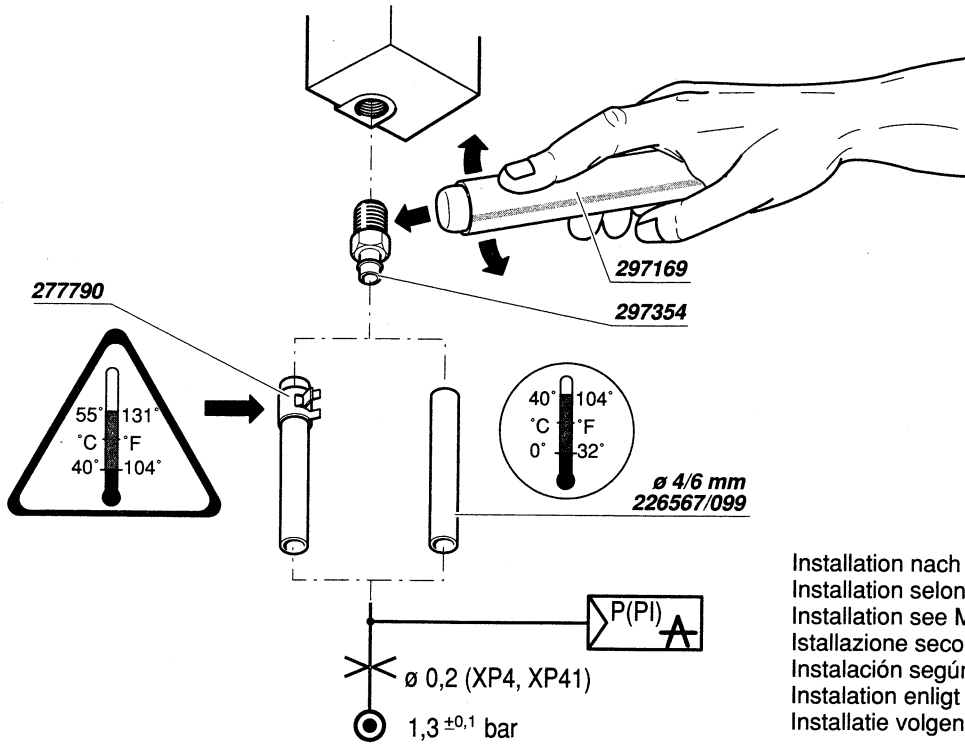

Installation nach MV 01.1  
 Installation selon MVE 01.1  
 Installation see MVE 01.1  
 Installazione secondo MVI 01.1  
 Instalación según MVSp 01.1  
 Installation enligt MVS 01.1  
 Installatie volgens MVNL01.1

6

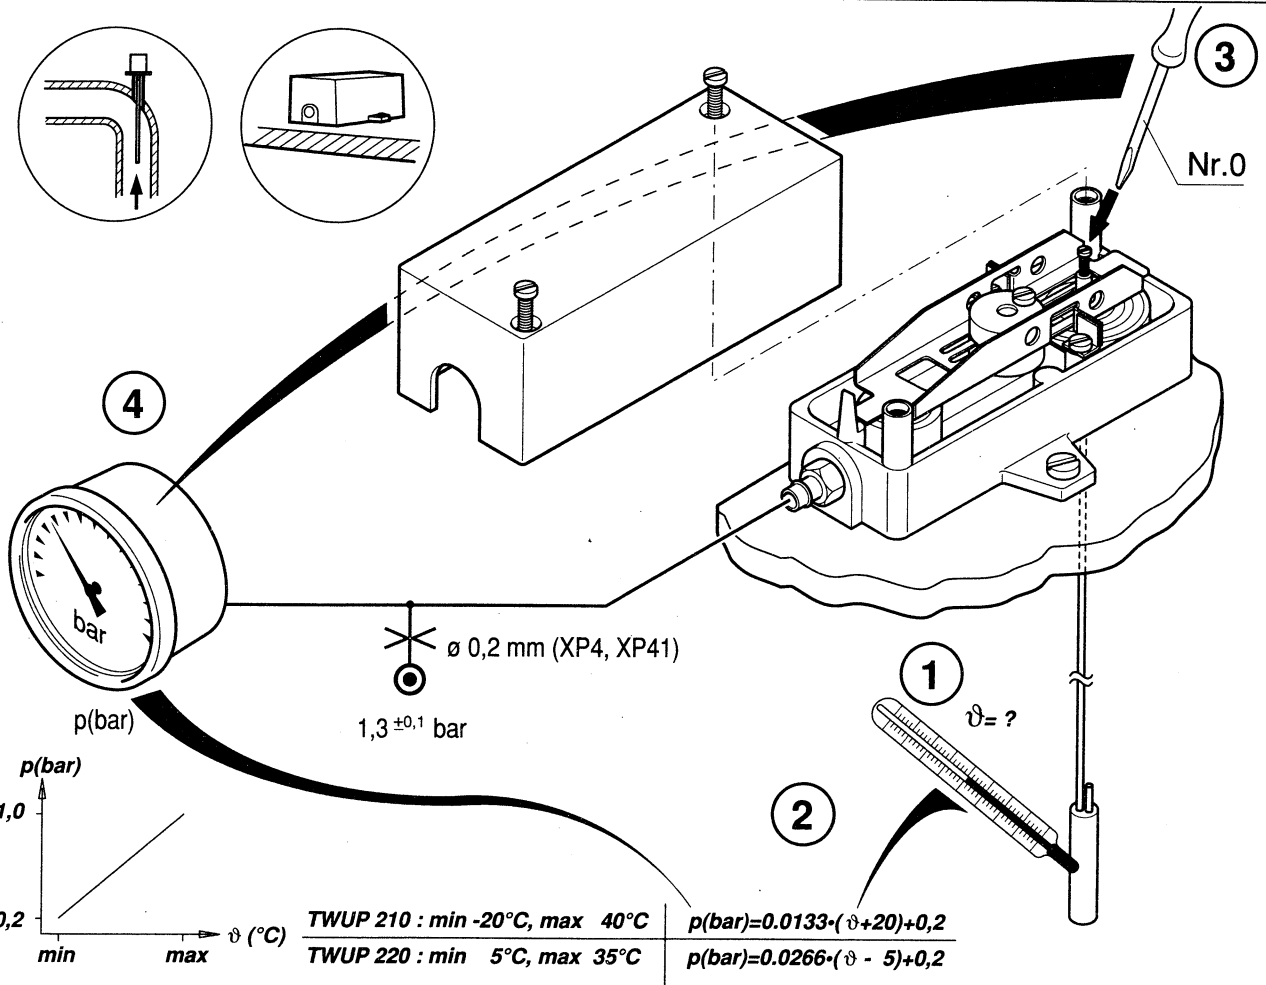

- Änderungen vorbehalten. - Nous nous réservons le droit d'apporter, sans avis préalable, toutes modifications que nous jugerons nécessaires au matériel décrit. - Right of amendment reserved.  
 - Con riserva di modifiche. - Sujeto a posibles modificaciones. - Aendringer vorbehalten. - Veranderingen voorbehouden.