

EY6LO00: Operating and indicating unit for I/O modules, modu600-LO

Features

- Part of the SAUTER modulo 6 system family
- Pluggable element for direct operation and visualisation of displays for the modu6** I/O modules
- Automatic detection of the current I/O module configuration
- Display of values and statuses of the inputs and outputs on an LCD colour display
- Detailed display of the individual inputs and outputs including labelling, type, status and graphics
- Simple 4-button operation
- LED indicator of I/O module modu6**-IO
- Manual operation of outputs
- Ready for use without parameterising



EY6LO00F001

Technical data

Power supply

Power supply	From I/O module modu6**-IO
Current consumption	≤ 12.5 mA
Dissipated power	≤ 0,3 W

Ambient conditions

Operating temperature	0...45 °C
Storage and transport temperature	-25...60 °C
Ambient humidity	10...90% rh, no condensation

Indicators, display, operation

Resolution	240 × 240 pixels, colour LCD
Operation	Four buttons: Back/reject, Reverse/reduce, Forward/increase, Confirm

Interfaces and communication

Connection	4-pin, spring contacts
Protocol	Proprietary

Standards and directives

Type of protection	Connections: IP00 front, plugged in: IP30 (EN 60730-1)
Protection class	III (EN 60730-1)
Environment class	3K3 (IEC 60721)

CE conformity according to	EMC Directive 2014/30/EU	EN 61000-6-1, EN 61000-6-2, EN 61000-6-3, EN 61000-6-4, EN 50491-5-1, EN 50491-5-2, EN 50491-5-3
----------------------------	--------------------------	---

Overview of types

Type	Features
EY6LO00F001	modu600-LO, operating and indicating unit for I/O modules

Manuals

Document number	Language	Title
D100386646	de	modu600-LO Bedienungsanleitung
D100397589	de	Systembeschreibung SAUTER modulo
D100408512	de	EY-modulo 6 – Best Practice I
D100408262	en	modu600-LO Operating instructions
D100402674	en	SAUTER modulo system description
D100410201	en	EY-modulo 6 – Best Practice I
D100408261	fr	modu600-LO Notice d'emploi
D100402676	fr	Description du système SAUTER modulo
D100410203	fr	EY-modulo 6 – Meilleures pratiques I



Description of operation

The modu600-LO local operating device is used to display and operate the modulo6 I/O modules and their input and output signals. The module is hot-pluggable. It reads and accepts the configuration of the I/O module to which it is connected.

For each configured channel, the object description, signal type and object status are displayed. Digital inputs are represented graphically with a dot and digital outputs with a switch. Analogue inputs are represented with a progress bar (relative) and analogue outputs with a slider (relative).

The configuration of a channel is defined with CASE Engine and cannot be changed. Output signals can be overridden. The override is stored and is not lost in the event of a power failure or restart if the operating device remains connected.



ATTENTION!

Data loss. If the operating device is removed from the I/O module during operation, all signal overrides are lost.

► The signal overrides are only retained if a modu600-LO is replaced with another modu600-LO in the de-energised state (this does not apply to manually configured channels).

When the operating device is removed during operation, the signals on the I/O module assume the last known state (according to the automation plan or overridden via mobile app).

The local operating device has priority over the app. An override by the local operating unit cannot be changed by the app. However, the local operating unit can change an override set via the app. When the local operating unit is removed, the override via app is only retained if it has not been changed by the local operating unit.

No settings are transferred when the operating device is changed from one I/O module to another module. The settings are also not transferred when the change is made in a de-energised state.

If channels are not configured, it is possible to manually set the signal type and control the output signal on the operating device. However, this manual setting is not saved and is not retained in the event of a power failure or a restart.



Note

The modu600-LO supports the UTF-8 character set.

Unknown characters such as Hebrew, Arabic and Asian characters are replaced by spaces. The supported characters are listed in the modu600-LO operating instructions.

Intended use

This product is only suitable for the purpose intended by the manufacturer, as described in the "Description of operation" section.

All related product regulations must also be adhered to. Changing or converting the product is not admissible.

Improper use

The SAUTER modulo 6 system does not have functional safety and is not fail-safe. MTTF, MTBF and MTTR data is not available.

This product is not suitable:

- for safety functions
- as an emergency operating level according to the Machinery Directive 2006/42/EU
- in transportation equipment and storage facilities as per Directive 37/2005
- as a measuring device as per EU Measuring Instruments Directive 2014/32/EU
- for use outside and in rooms with the risk of condensation

Standard EN ISO 13849-1 has not been considered. If applicable, a local emergency operating device must be installed on the plant side.

Engineering notes



Note

The modu600-LO may only be plugged in and operated by qualified personnel. Prevent access by laypersons.

The I/O modules of the modu6 system family can be supplemented by the modu600-LO local operating unit. The modu600-LO enables the inputs and outputs in the I/O module to be visualised and operated.

The modu600-LO operating device can be installed or removed during operation (hot-pluggable) without affecting the functions of the automation station or the I/O modules. All manual settings, especially overrides, are lost when the unit is removed during operation.

The modu600-LO operating device works without special commissioning or engineering. For this reason, a modu600-LO operating unit can also be used successively for different I/O modules.

Access security

ATTENTION!



Signal overrides set using a modu600-LO are reset when the operating unit is removed.

- ▶ Restrict access (including via mobile apps) to the local operating level on site.
- ▶ Consider the access security during the planning and risk assessment of the plant.

ATTENTION!



The modu600-LO local operating device must not be used as a maintenance or emergency stop switch for the system.

- ▶ Do not use the device for local emergency operation in dangerous situations.
- ▶ Switch off the system completely for maintenance work.

Note



With a separate power supply from the modu601-LC (separate I/O module supply module), the override values of the local operating device are retained if the automation station fails.

LED indicator of the modu600-LO

The LED indicator of the connected I/O device is transmitted unchanged to the LCD of the modu600-LO.

Status ¹⁾	Display	Meaning
Continuous green		Module in operation
Continuous orange		Startup mode
Flashing orange		Configuration error Update mode
Rapid flashing orange		modu600-LO firmware update
Continuous red		Not configured
Flashing red		I/O bus communication error ²⁾ (iSEB)
Off→Green→Red		LED test sequence
Off		No power supply

Firmware update

Any available firmware updates of the modu600-LO are automatically initiated by the automation station after switching on. During the update, the screen remains black and the LED flashes rapidly orange.

Operation

The modu600-LO has four buttons (Back/reject, Reverse/reduce, Forward/increase, Confirm) and is based on an intuitive operating concept with a simple and intuitive navigation structure.

¹⁾ LED flashing: 500 ms on, 500 ms off

LED flashing rapidly: 100 ms on, 100 ms off

LED test sequence: 1 second off > 1 second green > 1 second red

²⁾ The communication error display (flashing red) has priority, for example over the startup mode display (continuous orange)

Standard view

In the standard view of the LCD display, all inputs and outputs are shown graphically. After an input or output is selected, the channel designation and the current value appear in the middle of the display. Output values can be directly overridden here.

List view


A list view can be selected instead of the standard view. The list view shows all the I/O channels with the labelling defined in the project.

Detailed view


The detailed view provides additional information on a selected I/O channel. The designation, configuration and status details are displayed, as well as a graphic representation of the channel signal. The signal is displayed in real time as a graph in the detailed view for a period of five minutes. In this view, the outputs can be overridden manually or reset to automatic mode.

Info view


The info view shows the product information of the modu600-LO and the associated I/O module, for example the type, serial number, firmware version and production date.

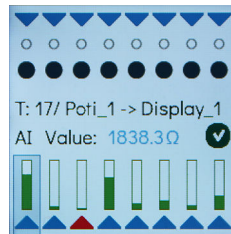


Standard view

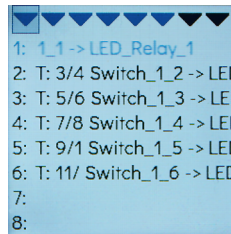

List view

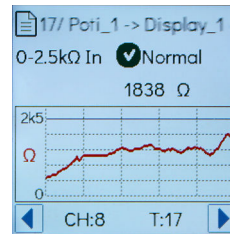

Detailed view

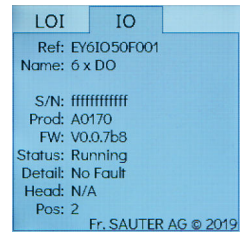

Info view

Button functions

Button	Function	Mode	Description
	Back	Navigation	Press key briefly: Back one level Hold key down: Info view or reset
	Backwards	Navigation	Press key: Back one position
		Value change	Press key briefly: One step smaller Hold key down: Multiple steps smaller
	Forwards	Navigation	Press key: One position forward
		Value change	Press key briefly: One step bigger Hold key down: Multiple steps bigger
	Confirm	Navigation	Press key briefly: Confirm selection Hold key down: List view or detailed view
		Value change	Press key: Confirm change

Detailed operating instructions can be found in the modu600 operating manual.

Disposal

When disposing of the product, observe the currently applicable local laws.

More information on materials can be found in the Declaration on materials and the environment for this product.

Dimension drawing

All dimensions in millimetres.

