 



de Raumtemperaturfühler, Unterputz
 fr Sonde de température ambiante, encastrée
 en Room temperature sensor, recessed
 it Sensore di temperatura ambiente, installazione a incasso
 es Sonda de temperatura para sala, instalación bajo revoque
 sv Omgivningstemperaturgivare, infälld montering
 nl Ruimtetemperaturopnemer, inbouw

de Montagevorschrift
 fr Instruction de montage
 en Fitting instructions
 it Istruzioni di montaggio
 es Instrucciones de montaje
 sv Monteringanvisning
 nl Montagevoorschrift

EGT386F101
 EGT486F101
 EGT686F101





 EGT388F101
 EGT388F102
 EGT688F101



de Installationsanweisung für die Elektrofachkraft
 fr Notice d'installation pour l'électricien
 en Guidelines for the electrician
 it Informazioni per l'installatore elettrico
 es Instrucciones de instalación para el electricista
 sv Installationsinstruktion för behörig elektriker
 nl Instalatie aanwijzing voor de elektromonteur




de Für den Einsatz in üblicher Umgebung
 fr Pour usage dans un environnement normal
 en For use in normal environments
 it Per impiego in ambiente usuale
 es Para el uso en ambiente normal
 sv För användning i normal miljö
 nl Voor toepassing in normale omgeving

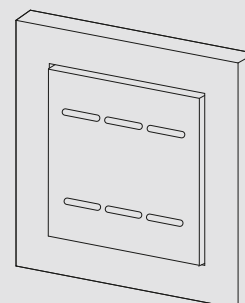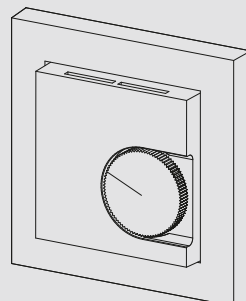


IP20
 EN60529




 

EGT 386
 EGT 486
 EGT 686

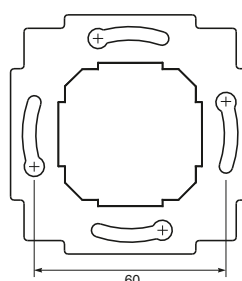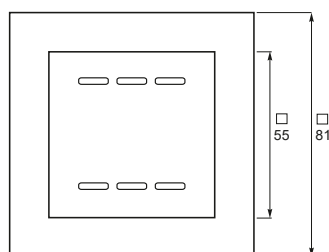

de abdichten
 fr rendre étanche
 en seal
 it otturare
 es junta
 sv avtätning
 nl afdichten

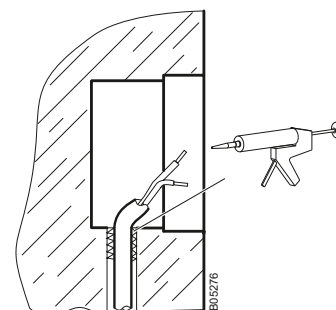


EGT 388
 EGT 688

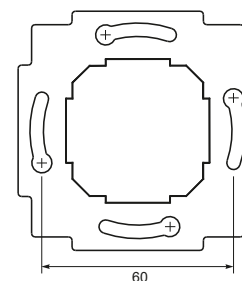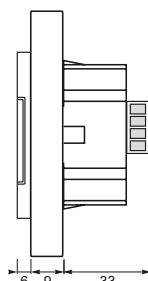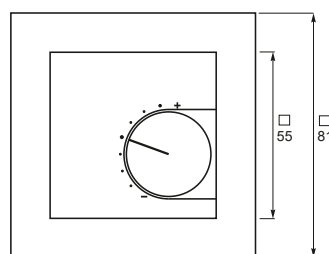



1a

EGT 386
 EGT 486
 EGT 686

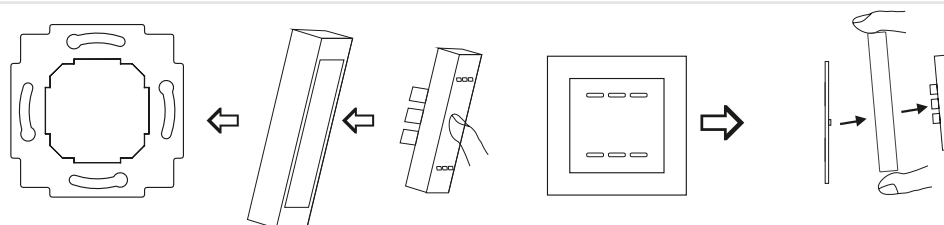


1b

EGT 386
 EGT 486
 EGT 686

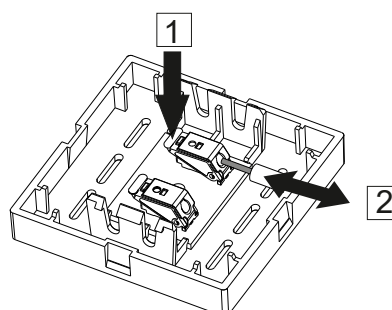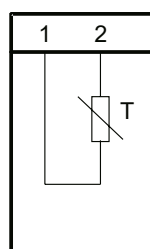


0,25 1,5 mm²
 23 ... 16 AWG

 


2a


EGT 388, 688

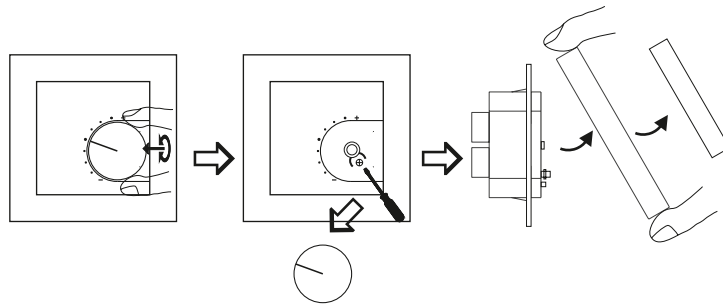**2b**


EGT 388, 688

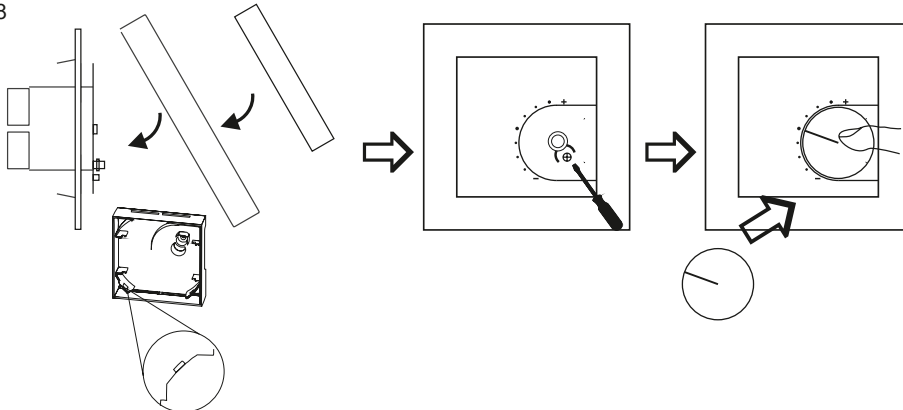**3a**


EGT388F101

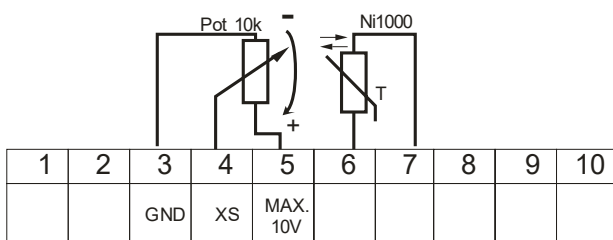**3b**

EGT388F102

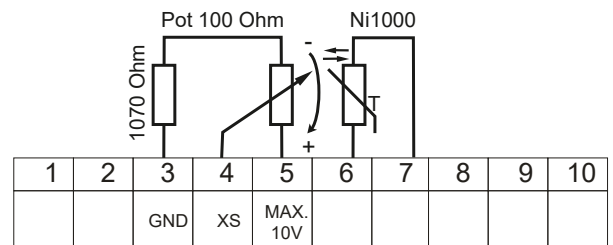**3c**

EGT688F101

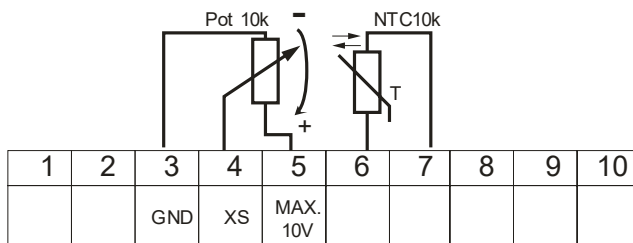

de Dokument aufbewahren
 fr Ce document est à conserver
 en Retain this document
 it Conservare il documento
 es Guardar el documento
 sv Spara dokumentationen
 nl Document bewaren

© SAUTER Head Office
 Fr. Sauter AG
 Im Surinam 55
 CH-4058 Basel
 Tel. +41 61 - 695 55 55
 Fax +41 61 - 695 55 10
www.sauter-controls.com
info@sauter-controls.com

UK Importer:

Sauter (GB)
 Inova House
 RG24 8GG